

Measuring guide for PureNight skylight blind

In the case of a roller blind compatible with a specific window manufacturer, please find instructions below.

1. Blinds compatible with roof windows Velux®, Fakro, Rooflite, Dakstra, Okpol.

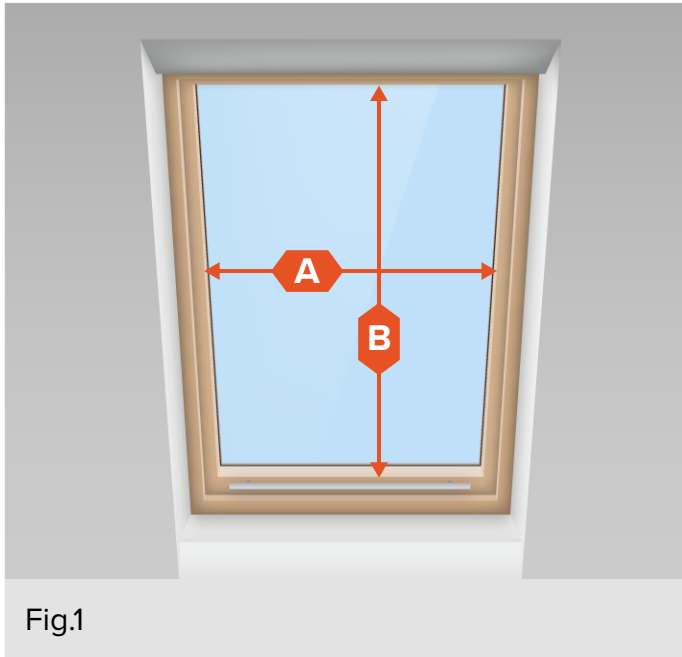


Fig.1

1. Select the manufacturer's name from the list in the configurator.

! All dimensions must be entered in millimeters(mm)

2. Measure the distance between the inner edges of the window sash (Fig.1).


width = A

height = B

Top Tip

Make sure there are no protruding parts in the measuring area. This could prevent the roller blind from being installed.

Measuring points for different cross-sections of window sash profiles

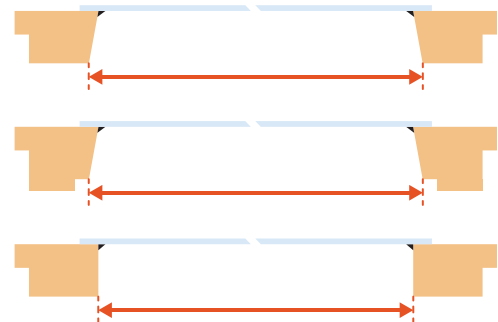

2. Roller blinds compatible with Roto roof windows.

If you have ROTO windows:

1. Find your window number on the nameplate (Fig. 2), then find it in the configurator and select it.

2. Select the window type in the configurator:
PVC window / wooden window

3. Measure the distances between the internal edges of the window sash (Fig. 1) and enter them into the configurator.

ROTO



Fig.2